

Iridium SMS options

- *Send a message from a 9505A phone to an email account*
- *Send a message from a 9505A phone to another Iridium subscriber.*
- *Send a message to an Iridium subscriber from an email account.*
- *Reply to a message from an email account.*

See the TR Telecom 'SMS Email and Iridium SMS' instructions for how to set up your Iridium 9505 or Iridium 9505A satellite phone to enable SMS facilities. SMS is not available from Motorola 9500 models.

Send a message to an Iridium subscriber from the Iridium web page.

IRIDIUM SATELLITE SOLUTIONS
Send a Satellite Message

To: 8816

Reply email*:

Message:

Character count: (160 character maximum)

- **Messaging FAQs**
Answers to commonly asked questions about this service.
- **MDA Configuration**
If you are currently an Iridium Global Messaging Customer, you may change your Message Delivery Areas online.

* Reply functionality only available on properly equipped devices.

ONE SYSTEM, GLOBALLY.

*Go to the Iridium web page; www.iridium.com
Click on 'Send a Satellite Message'
Complete the 'To' field with your Iridium satellite phone number
Enter your email address in the 'Reply email' field
Type your message in the 'Message' field
Click 'Send Message' to have the text message sent to the satellite phone.*

For more details please contact:
TR Telecom Pty. Ltd.
ABN:15 098 733 638
Email: satellite@trtelecom.com
Phone: 1300 550 014
Internet: <http://www.trtelecom.com>

Service Partner for the IRIDIUM Satellite Network

